


# USER MANUAL

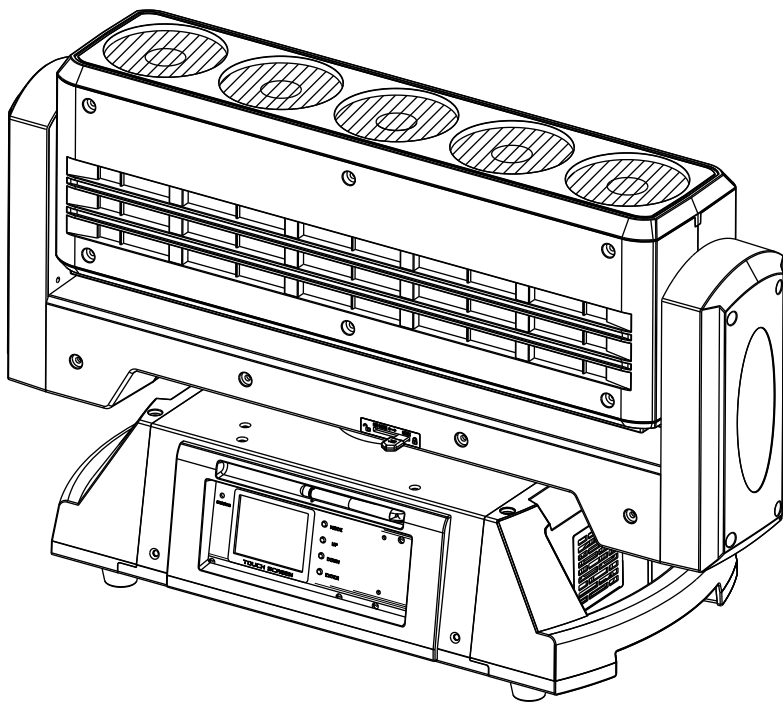

Version: 1.3



## Table of content

<b>1.Open–Package guidelines.....</b>	<b>1</b>
1.1 Package.....	1
<b>2.Safety instructions.....</b>	<b>1</b>
<b>3.Operating determination.....</b>	<b>3</b>
<b>4.Rigging the fixture.....</b>	<b>4</b>
4.1 Mounting.....	4
4.2Installing the Clamps.....	4
4.3 Power supply connection and cut off.....	5
4.4 Power Connection.....	6
4.5 DMX–512 connection/connection between fixtures.....	6
<b>5.Description of the device.....</b>	<b>7</b>
<b>6.Dimension.....</b>	<b>8</b>
<b>7.Display control.....</b>	<b>9</b>
7.1 Navigation in the Menu.....	9
7.2 Display Operation.....	9
7.3 Menu list.....	11
<b>8.DMX protocol.....</b>	<b>12</b>
<b>9.Maintance and cleaning.....</b>	<b>17</b>
<b>10.Electric equipment specification.....</b>	<b>17</b>
10.1 Electrical paramters.....	17
10.2 Weight and dimensions.....	17
10.3 Channel Characteristics.....	17
10.4 Menu Function.....	17
<b>11.Electronic drawing.....</b>	<b>18</b>

Congratulations on choosing our products! Please carefully read this instruction manual in its entirety and keep it well for using reference. This manual contained about the installation and the relative using information of this products. Please refer to this manual's relative instruction when using this equipment.



## 1.Open–Package guidelines

-This equipment is made of new style,high intensity plastic. It fully shows the modern times light characteristic with beauty structure. And it is made according to CE standard. Fully agree with the international standard of DMX512 agreement.

-When receive the product, please be careful to take and put,Check if the product has damage or not because of transportation, and check the following parts:

- |                    |                     |
|--------------------|---------------------|
| 1.Signal cable-1PC | 2.Safety cable-1PC  |
| 3.User Manual-1PC  | 4.Omega holder-2PCS |
| 5.Power cable-1PC  | 5.Service card-1PC  |



### 1.1 Package

Unpacking the fixture

- 1.Open the flight case cover.
- 2.With one person on each side, lift the fixture out of the flight case.
- 3.Unlock pan before operating fixture.

Packing the fixture

- 1.Disconnect the fixture from power and allow it to cool.
- 2.Lock arm as figure.- Fig.1(PAN Mechanism Lock and Release (every 90°)- Fig.2)
- 3.Place the fixture in the bottom of the flight case, and cover the case without forcing.

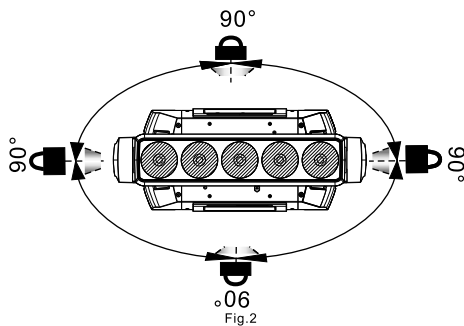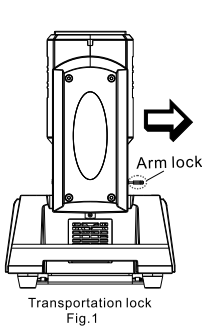

## 2.Safety instructions

Every person involved with installation and maintenance of this device to:

- Be qualified
- Follow the instructions of this manual.



This device has been shipped with our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

### Important:

- The manufacturer will not accept liability for any resulting damages caused by the nonobservance of this manual or any unauthorized modification to the device.
- Please consider that damages caused by manual modifications to the device are not subject to warranty.

- Never let the power-cord come into contact with other cables! Handle the power cord and all connections with particular caution!
- Make sure that the available voltage is not higher than stated on the rearpanel.
- Always plug in the power plug least. Make sure that the power-switch is set to off-position before you connect with themains with particular caution!
- Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the power-cord from time to time.
- Always disconnect from the mains, when the device is not in use or before cleaning it.
- Only handle the power-cord by the plug, Never pull out the plug by tugging the powercord.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- The electric connection, repairs and servicing must be carried out by a qualified employee.
- Do not connect this device to a dimmer pack.
- Do not switch the fixture on and off in short intervals as this would reduce the lamp's life.
- Do not touch the device's housing bare hands during its operation (housing becomes hot)!
- For replacement use lamps and fuses of same type and rating only.

### Eye damage!

**Avoid looking directly into the light source (meant especially for epileptics)!**



- **Minimum distance of illuminated objects**  
The projector needs to be positioned so that the objects hit by the beam of light are at least 0.20 metres (8" ) from the lens of the projector.

t<sub>a</sub> 40 °C

- **Maximum ambient temperature**  
Do not operate the fixture if the ambient temperature (T<sub>a</sub>) exceeds 40 °C (104 °F).

t<sub>c</sub> 90 °C

- **Temperature of the external surface**  
The maximum temperature that can be reached on the external surface of the fitting, in a thermally steady state, is 90 °C (194 °F).

IP20

- **IP20 protection rating**  
The fitting is protected against penetration by solid of over 12mm (0.47") in diameter (first digit 2), but not against dripping water, rain, splashes or jets of water (second digit 0).



- **Indoor use only**



- **Not suitable for household illumination**



Risk Group 2  
According to  
EN62471

- **Photobiological Safety**  
**CAUTION.** Possibly hazardous optical radiation emitted from this product. Do not stare at operating lamp. May be harmful to the eyes.



- **Light collimation system**  
This product contains internal light collimation system. Avoid intense light from any angle.



- **The products to which this manual refers comply with the European Directives pursuant to:**
  - 2006/95/EC - Safety of electrical equipment supplied at low voltage (LVD)
  - 2004/108/EC - Electromagnetic Compatibility (EMC)
  - 2011/65/EU - Restriction of the use of certain hazardous substances (RoHS)
  - 2009/125/EC - EcoDesign requirements for Energy-related Products (ErP)



- **Protection against electrical shock**  
Connection must be made to a power supply system fitted with efficient earthing (Class I appliance according to standard EN 60598-1). It is, moreover, recommended to protect the supply lines of the projectors from indirect contact and/or shorting to earth by using appropriately sized residual current devices.



#### ➤Disposing

This product is supplied in compliance with European Directive 2012/19/EU-Waste Electrical and Electronic Equipment (WEEE) .To preserve the environment please dispose/recycle this product at the end of its life according to the local regulation.



#### ➤Battery

This product contains a rechargeable lead-acid or lithium iron tetraphosphate battery. To preserve the environment,please dispose the battery at the end of its life according to the regulation in force.

### 3.Operating determinations

- This device is a moving-head for creating decorative effects and was designed for indoor use only.
- If the device ha been exposed to drastic temperature fluctuation(e.g.after transportation).do not weitch it on immediately.The arising condensation water might damage your device,Leave the device switched off until it has reached room temperature.
- Never run the device without lamp!
- Do not shake the device,Avoid brute force when installing or operating the device.
- Never life the fixture by holding it at the projectorhead, as the mechanics may be damaged. Always hold the fixture at the transport handles.
- When choosing the installation-spot,please make sure that the device is not exposed to heat,moisture or dust.There should not be any cables lying around.You endanger your own and the safety of others!
- The minimum distance between light output and the illuminated surface must be more than 0.2 meters.
- Make sure that the area below the installation place is blocked when rigging,derigging or servicing the fixture.
- Always fix the fixture with an appropriate safety rope, Fix the safety rope at the correct holes only.
- Operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- The lamp must never be ignited if the objective-lens or any housing-cover is open, as discharge lamps may explose and emit a hign ultraviolet radiat, which may cause burns.
- The maximum ambient temperature 40° C must never be exceeded.
- Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation!
- Please use the original packaging if the device is to be transported.
- Please consider that unauthorized modifications on the device are forbidden due to safety reasons!.
- If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void.Furthermore, any other operation may lead to dangers like short-circuit,burns, electric shict,burns due to ultraviolet radiation,lamp explosion,crash etc.

## 4. Rigging the fixture

### 4.1 Mounting



***Pay attention to the regulations of CE.***

***Installation by qualified staff to complete.***

☞ For the various mounting positions of the FIXTURE (standing on the floor, sideways or hanging different accessories kits are available.

☞ Through this a safe and firm installation is assured.

☞ You'll find special connectors on the bottom side of the system which are put to use here.

### 4.2 Installing the Clamps

Please consider the respective national norms during the Installation! The installation must only be carried out by an authorized dealer!

The installation of the projector has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.

The installation must always be secured with a secondary safety attachment, e.g. an appropriate catch net. This secondary safety attachment must be constructed in a way that no part of the installation can fall if the main attachment fails.

When servicing the fixture staying in the area below the installation place, on bridges, under high working places and other endangered areas is forbidden.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert after every four years in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.

The projector should be installed outside areas where persons may walk by or be seated.

**Important!** Overhead rigging requires extensive experience CE, including (but not limited to) calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installation yourself, but instead use a professional structural rigger. Improper installation can result in bodily injury and or damage to property.


The projector has to be installed out of the reach of people.

If the projector shall be lowered from the ceiling or high joists, professional trussing systems have to be used. The projector must never be fixed swinging freely in the room.

Caution Projectors may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do not install the projector!

Before rigging make sure that the installation area can hold a minimum point load of 10 times the projector's weight.



For overhead use, always install a safety-rope that can hold at least 10 times the weight of the fixture. You must only use safety-ropes with screw on carabines. Pull the safety-rope through the two apertures on the bottom of the base and over the trussing system etc.

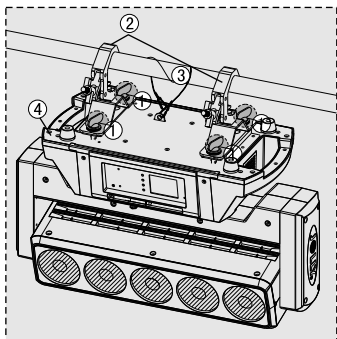

- |   |                |
|---|----------------|
| ① | Lock catch     |
| ② | omega holder   |
| ③ | secure chain   |
| ④ | mounting plate |



**⚠ Warning:** it is necessary to make sure that the installation location is perfectly appropriate, and the installation location is safe and reliable.

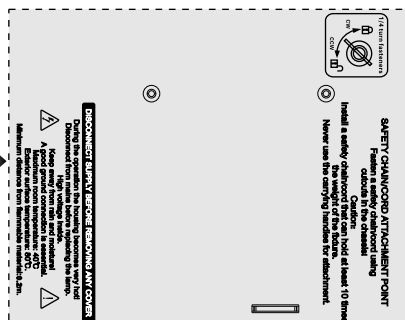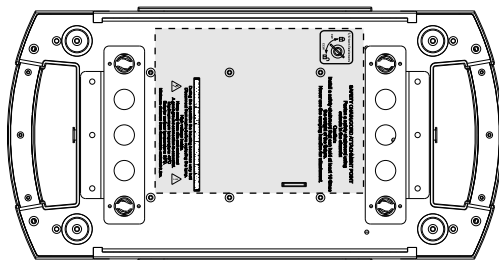

Connect the light source to the main power source with the plug of the power cord, or cut off the power supply:

Cut off: according to procedures, press the button on the rotating plug, pull out.



### 4.4 Power Connection

If you wish to change the power supply settings, see the chapter appendix Connect the fixture to the mains with the enclosed power cable and plug.




**Warning:** please verify the power of the power supply equipment prior to the connection! Earth wire must be grounded!

CABLE(EU)	CABLE(US)	Pin	INTERNATIONAL
Brown	Black	Live	<b>L</b>
Light blue	White	Neutral	<b>N</b>
Yellow/Green	Green	Earth	<b>⊕</b>

### 4.5 DMX-512 connection/connection between fixtures

Only use stereo shielded cable and 3-pin XLR-plugs and connectors in order to connect.

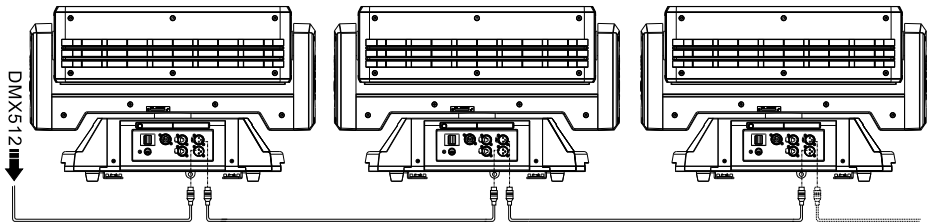

#### Caution

At the last fixture, the DMX-cable has to be terminated with a terminator. solder a 120 resistor between signal(-) and Signal (+) into a 3-pin XLR-plug and plug it in the DMX-output of the last fixture.

DMX output 3-pin XLR socket      DMX input 3-pin XLR socket



1: Ground  
2: Signal (-)  
3: Signal (+)



DMX output 5-pin XLR socket      DMX input 5-pin XLR socket




1: Ground  
2: Signal (-)  
3: Signal (+)  
4: N. A.  
5: N. A.

#### DMX Terminator Diagram

-For installations where the DMX cable has to run a long distance or is in an electrically noisy environment it is recommended to use a DMX terminator. This helps in preventing corruption of the signal by electrical noise. The DMX terminator is simply an XLR plug with a 120Ω resistor connected between pins 2 and pins 3, which is then plugged into the output XLR socket of the last fixture in the chain.

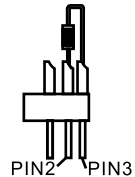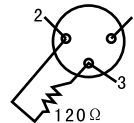


## 5.Description of the device

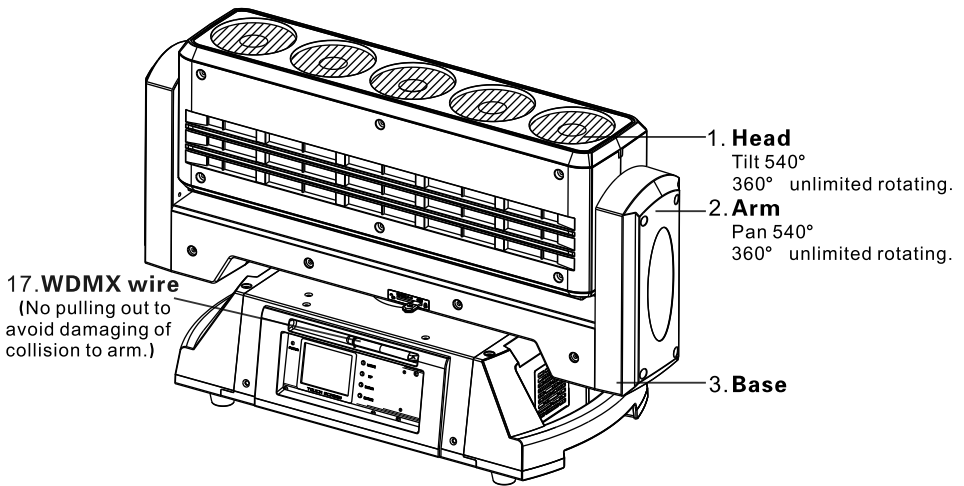


### BACK PANEL

- 4.3-pin XLR female
- 5.Network interface
- 6.Power-in
- 7.Power switch
- 8.Insurance seat
- 9.Network interface
- 10.3-pin XLR male


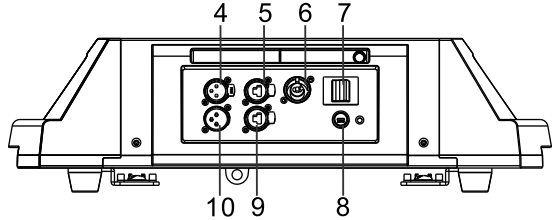


### CINTROL PANEL

- 11.Status indicator lamp
- 12.MODE button
- 13.UP button
- 14. DOWN button
- 15. ENTER button
- 16. Touch screen(LCD display)

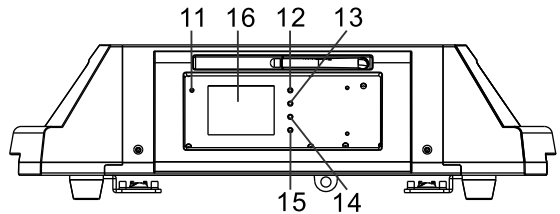

## 6.Dimension

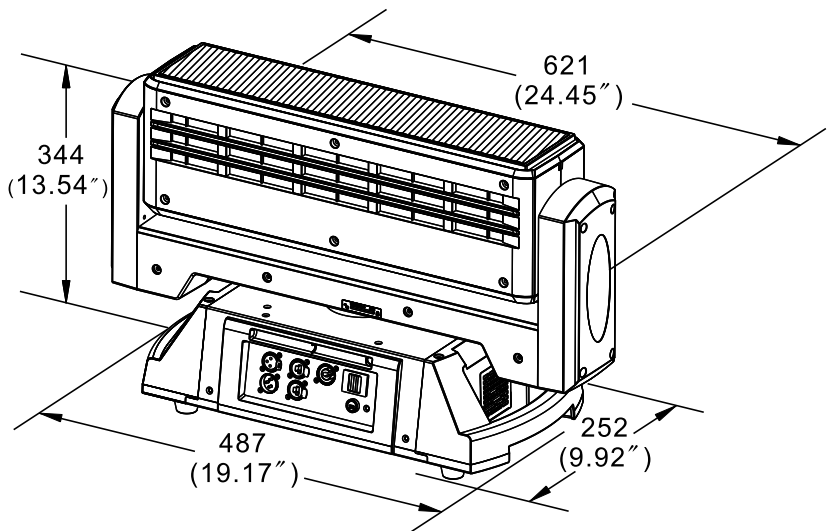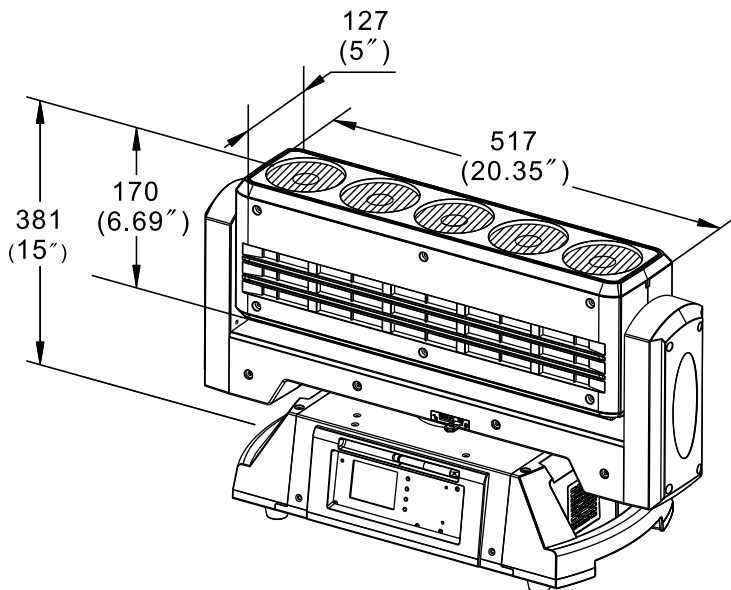



## 7.Display control

### 7.1 Navigation in the Menu

Using the buttons or touch screen, and this can be simply and easily set the address code and functions code.

If you view or modify the lighting feature set, then press ENTER button, the display will enter the menu interface. Both there is sub menu corresponding to the functional operation of the main menu. Each of the menus is representative of the specific features of the lamp. The specific contents shows as the table menu below.

Set or browse lighting function, press UP or DOWN button.

Press ENTER to save your changes or enter the submenu. Press the UP or DOWN can change the numerical (increase or decrease in value).


Press the MODE button to return to menu. Set a time 0 to 10 minutes automatically exit menu interface and close the screen.

### 7.2 Display Operation

Put through power supply, open the power switch of lamps and lanterns, display show the company LOGO website. According to the main interface, as shown in figure:

In the main interface, press "MODE" button to view the software version, press the "UP" "DOWN" can modify the DMX address.

If the screen "📶" icon is green, said DMX signal connection is normal, this state can be used to check the lamps and lanterns and connection between the control table is normal.

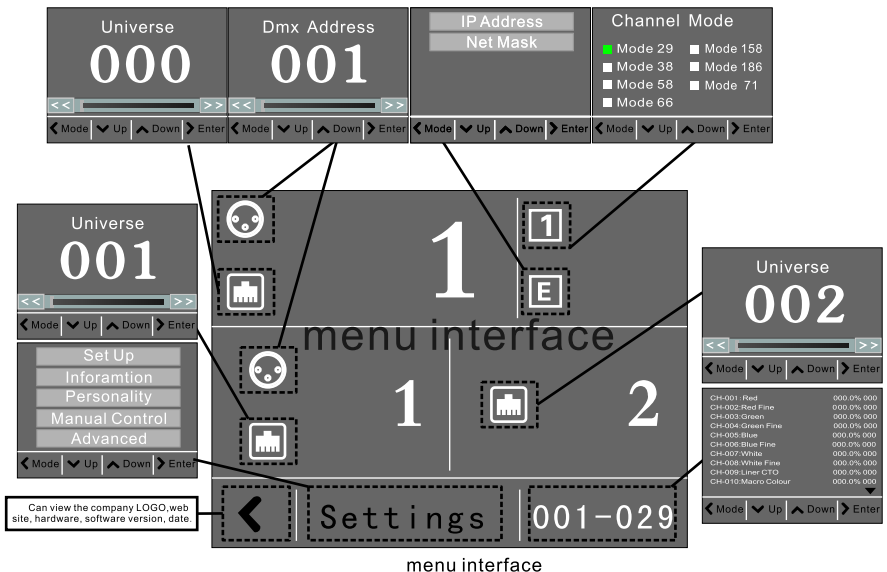

This lamp can be set to turn off the automatic flip screen function, touch this "📶" icon can be manually flip screen.

Click on the main interface of the icon, numerical to view view Settings related information of lamps and lanterns. Symbols such as the main interface appear "Δ", the following error message indicates that there might be a lamps and lanterns, can click to view and control information content to modify the lamps and lanterns.

CODE #	ERRO INFO	CHECK MEASUREMENT	note
E01	SpiFlashError	Check the welding of memory IC	RESET ERROR
E02	Program Err 1	Check the welding of Chlp	
E03	Program Err 2	Check the welding of master IC EP3C	
E04	MBDInit Error	Check the communication signal 485& 485 chip & memory IC	
E05	BD1Init Error		
E06	BD2Init Error	Check main cable ABAB(485) chip	
E12	BusErr1		
E14	SPDError	Check the welding of master IC	
E16	MFpga Error	Check the communication signal& welding of communication chip	
E17	BD1 BUS Error		
E18	BD2 BUS Error		
E21	Pan FB. Err	Check the light coupling line, optical coupling switch and a plate of the relative position measurement	
E23	Tilt FB. Err		
E22	Pan Zero Err	Check cable of sensor, distance and location of ,magnets and sensor	
E24	Tilt Zero Err		
E37	B.Fan1 Error	Check the fan of head	
E45	EthMDL Error	Check the fan of ArtNet communication signal	

## 7.3 Menu list

				Remark
Set up	Basic Engine	Universe	0~255	
		DMX Address	000~XXX	
	Strobe Engine	Universe	0~255	
		DMX Address	000~XXX	
	Pixels Engine	Universe	0~255	
	Fixture Id	0001~9999		Lamps address
	Channel Mode	Mode 1	1~29	default Mode1
		Mode 2	1~38	
		Mode 3	1~58	
		Mode 4	1~66	
		Mode 5	1~158	
		Mode 6	1~186	
		Mode 7	1~71	
	Ethernet	IPAddress	002.XXX.XXX.XXX	
			Confirm	
		Netmask	255.XXX.XXX.XXX	
			Confirm	
Information	Fixture Times	XXXXX h XX m		Total working hours
	LED Times	LED On Times	XXXXh XXm	Lamp On working hours
		Reset Lamp Time	Input Password	Reset Lamp Time
	Error List			Error details
	Diagnosis	BOARD 1: XX.XX%		Diagnosis
		BOARD 2: XX.XX%		
		BOARD 3: XX.XX%		
		BOARD 4: XX.XX%		
		BOARD 5: XX.XX%		
	DMX Values			DMX Values
	Fans Monitor			Fans Monitor
Personality	Pan/Tilt	Pan Reverse ON/OFF		Pan Reverse(default OFF)
		Tilt Reverse ON/OFF		Tilt Reverse(default OFF)
		Feedback ON/OFF		Pan/Tilt Auto Switch(default ON)
	Dmx Input	Wired Input		Wired Input(default)
		Wireless Input		Wireless Input
		Wireless In/XLR out		Wireless In/XLR out
		Ethnet Input		Ethnet Input
	Screen	Brightness		Brightness
		Screen Time out 0-10m		Screen Time out
		Touch Screen ON/OFF		Touch Screen (default ON)
		Auto Screen ON/OFF		Auto Screen (default ON)
	Fan Mode	Auto		Default Auto
		High		
Manual Control	Reset	Reset Pan/Tilt		
	Channel			Chanel Testing
	Deom			
Advanced	Calibration	Input Password XXXX		Chanel Adgusting
	Factory Default	ON/OFF		Reset to orignal parameters
	Touch Calibration			Touch screen adjusting

## 8.DMX protocol

Mode1	Mode2	Mode3	Mode4	Mode5	Mode6	Mode7	Fade Type	Function	Dmx Value
1	1	1	1	1	1	1	Red	Black→Red 0-100%	0-255
2	2	2	2	2	2	2	Red fine	Red fine	0-255
3	3	3	3	3	3	3	Green	Black→ Green 0-100%	0-255
4	4	4	4	4	4	4	Green fine	Green fine	0-255
5	5	5	5	5	5	5	Blue	Black→ Blue 0-100%	0-255
6	6	6	6	6	6	6	Blue fine	Blue fine	0-255
7	7	7	7	7	7	7	White	Black→ White 0-100%	0-255
8	8	8	8	8	8	8	White fine	White fine	0-255
9	9	9	9	9	9	9	CTO	Reserve	0-14
								8000K	15-44
								7000K	45-74
								6000K	75-104
								5600K	105-134
								5000K	135-164
								4000K	165-194
								3200K	195-224
10	10	10	10	10	10	10	Macro colour	2500K	225-255
								Macro color OFF	0-9
								Red	10
								Green	11
								Blue	12
								Cyan	13
								Yellow	14
								Magenta	15
								White 7000 K	16
								White 3700 K	17
								White 5000 K	18
								Black	19
								Medium Yellow	20-22
								Straw Tint	23-26
								Surprise Peach	27-28
								Fire	29
								Medium Amber	30
								Gold Amber	31
								Dark Amber	32-34
								Sunrise Red	35-44
								Light Pink	45
								Medium Pink	46-48
								Pink Carnation	49-61
								Light Lavender	62-67
								Lavender	68-77
								Sky Blue	78-88
								Just Blue	89-99
								Dark yellow green	100-109
								Spring Yellow	110-111
								Light Amber	112
								Straw	113
								Deep Amber	114
								Orange	115-116
								Light Rose	117
								English Rose	118
								Light Salmon	119
								Middle Rose	120
								Dark Pink	121-122
								Magenta	123-124

Mode1	Mode2	Mode3	Mode4	Mode5	Mode6	Mode7	Fade Type	Function	Dmx Value
10	10	10	10	10	10	10	Macro colour	Peacock Blue	125
								Med Blu Green	126
								Steel Blue	127
								Light Blue	128
								Dark Blue	129-130
								Leaf Green	131-133
								Dark Green	134-135
								Mauve	136-137
								Bright Pink	138-141
								Medium Blue	142-144
								Deep Golden Amber	145
								Pale Lavender	146
								Special lavender	147-148
								Primary Green	149-150
								Bright Blue	151-156
								Apricot	157-161
								Pale Gold	162-167
								Deep Orange	168-171
								Bastard Amber	172-173
								Flame Red	174
								Daylight Blue	175-178
								Lilac Tint	179
								Deep lavender	180-183
								Dark Steel Blue	184-190
								Congo Blue	191-206
								Alice Blue	207
								Dirty White	208
								White	209-255
11	11	11	11	11	11	11	Strobe	CLOSED	0-3
								STROBE SLOWFAST (1→25 flash/sec)	4-103
								OPEN	104-107
								PULSATION SLOWFAST (0.5-25 flash/sec)	108-207
								OPEN	208-212
								RANDOM SLOW STROBE	213-225
								RANDOM MEDIUM STROBE	226-238
								RANDOM FAST STROBE	239-251
12	12	12	12	12	12	12	Dimmer	OPEN	252-255
13	13	13	13	13	13	13	Dimmer Fine	Dimmer 0-100%	0-255
14	14	14	14	14	14	14	Pan	Dimmer Fine 0-100%	0-255
								Pan 0°	0
								Pan 45°	17
								Pan 90°	43
								Pan 135°	69
								Pan 180°	85
								Pan 225°	101
								Pan 270°	128
								Pan 315°	154
								Pan 360°	170
								Pan 405°	186
								Pan 450°	212
								Pan 495°	240
								Pan 540°	255

Mode1	Mode2	Mode3	Mode4	Mode5	Mode6	Mode7	Fade Type	Function	Dmx Value
15	15	15	15	15	15	15	Pan Fine	Pan Fine	0-255
16	16	16	16	16	16	16	Pan Rotation	UNUSED RANGE	0-2
								CW Rotation speed from fast to slow	3-126
								Stop Rotation	127-130
								CW Rotation speed from slow to fast	130-255
17	17	17	17	17	17	17	Tilt	Tilt 0°	0
								Tilt 45°	17
								Tilt 90°	43
								Tilt 135°	69
								Tilt 180°	85
								Tilt 225°	101
								Tilt 270°	128
								Tilt 315°	154
								Tilt 360°	170
								Tilt 405°	186
								Tilt 450°	212
								Tilt 495°	240
18	18	18	18	18	18	18	Tilt Fine	Tilt 540°	255
								Tilt Fine	0-255
19	19	19	19	19	19	19	Tilt Rotation	UNUSED RANGE	0-2
								CW Rotation speed from fast to slow	3-126
								Stop Rotation	127-130
								CW Rotation speed from slow to fast	130-255
20	20	20	20	20	20	20	Function	The functions are activated passing through the "unused range" and staying 5 seconds.	
								Function off – rearmed	0-11
								Pan Tilt Fast (Default)	12-24
								Pan Tilt Normal	25-37
								Dimmer Curve 1	38-42
								Dimmer Curve 2	43-47
								Dimmer Curve 3	48-52
								Dimmer Curve 4	53-57
								RGBW Gamma curve 1 – gamma = 1.0	58-62
								RGBW Gamma curve 2 – gamma = 1.5	63-67
								RGBW Gamma curve 3 – gamma = 2.0	68-72
								Activate the following function channel 9 linear CTO automatically shut down.	
								Strobe Ethernet control open (default)	73-77
								Strobe Ethernet control	78-82
								Strobe pixel Ethernet control open (default)	83-87
								Strobe pixel Ethernet control control	88-92
								Strobe channel merger (default)	93-97
								Strobe independence	98-102
								Stroboscopic crosswise (default)	103-107
								Stroboscopic arrangement	108-112
								Flashing up and down	103-117
								PAN / TILT RESET	118-122
								UNUSED RANGE	128-255
21	21	21	21	21	21	21	Pixels R	Pixels R 0-100%	0-255
22	22	22	22	22	22	22	Pixels R Fine	Pixels R Fine 0-100%	0-255
23	23	23	23	23	23	23	Pixels G	Pixels G 0-100%	0-255

Mode1	Mode2	Mode3	Mode4	Mode5	Mode6	Mode7	Fade Type	Function	Dmx Value
24	24	24	24	24	24	24	Pixels G Fine	Pixels G Fine 0-100%	0-255
25	25	25	25	25	25	25	Pixels B	Pixels B 0-100%	0-255
26	26	26	26	26	26	26	Pixels B Fine	Pixels B Fine 0-100%	0-255
27	27	27	27	27	27	27	Strobe	CLOSED	0-3
								STROBE SLOWFAST (1→25 flash/sec)	4-103
								OPEN	104-107
								PULSATION SLOWFAST (0.5-25 flash/sec)	108-207
								OPEN	208-212
								RANDOM SLOW STROBE	213-225
								RANDOM MEDIUM STROBE	226-238
								RANDOM FAST STROBE	239-251
								OPEN	252-255
28	28	28	28	28	28	28	Pixels Dimmer	Pixels Dimmer 0-100%	0-255
29	29	29	29	29	29	29	Pixels Dimmer Fine	Pixels Dimmer Fine 0-100%	0-255
	30	30	30	30	30	30	Shape Selection	Reserve	0-7
								Single pulsation	8
								Divergence	9
								Single spaced interval 1	10
								Single spaced interval 2	11
								Single spaced interval 3	12
								Single spaced interval 4	13
								Reserve	14-255
	31	31	31	31	31	31	Shape Speed	Radius size,Static	0-63
								max to min speed	64-158
								Stop	159-160
								min to max speed	161-255
	32	32	32	32	32	32	Shape Fade	Shape Fade 0-100%	0-255
	33	33	33	33	33	33	Shape R	Shape R 0-100%	0-255
	34	34	34	34	34	34	Shape G	Shape G 0-100%	0-255
	35	35	35	35	35	35	Shape B	Shape B 0-100%	0-255
	36	36	36	36	36	36	Shape W	Shape W 0-100%	0-255
	37	37	37	37	37	37	Shape Dimmer	Shape Dimmer 0-100%	0-255
38	38	38	38	38	38	38	Shape Strobe	CLOSED	0-3
								STROBE SLOWFAST (1→25 flash/sec)	4-103
								OPEN	104-107
								PULSATION SLOWFAST (0.5-25 flash/sec)	108-207
								OPEN	208-212
								RANDOM SLOW STROBE	213-225
								RANDOM MEDIUM STROBE	226-238
								RANDOM FAST STROBE	239-251
								OPEN	252-255
	39	39		39	39		Red LED 1	Red 0-100%	0-255
	40	40		40	40		Green LED 1	Green 0-100%	0-255
	41	41		41	41		Blue LED 1	Blue 0-100%	0-255
	42	42		42	42		White LED 1	White 0-100%	0-255
					43		LED1 Dimmer	LED1 Dimmer 0-100%	0-255
	43	43		43	44		Red LED 2	Red 0-100%	0-255
	44	44		44	45		Green LED 2	Green 0-100%	0-255
	45	45		45	46		Blue LED 2	Blue 0-100%	0-255
	46	46		46	47		White LED 2	White 0-100%	0-255
					48		LED2 Dimmer	LED2 Dimmer 0-100%	0-255
	47	47		47	49		Red LED 3	Red 0-100%	0-255
	48	48		48	50		Green LED 3	Green 0-100%	0-255
	49	49		49	51		Blue LED 3	Blue 0-100%	0-255
	50	50		50	52		White LED 3	White 0-100%	0-255
					53		LED3 Dimmer	LED3 Dimmer 0-100%	0-255
	51	51		51	54		Red LED 4	Red 0-100%	0-255
	52	52		52	55		Green LED 4	Green 0-100%	0-255
	53	53		53	56		Blue LED 4	Blue 0-100%	0-255
	54	54		54	57		White LED 4	White 0-100%	0-255
					58		LED4 Dimmer	LED4 Dimmer 0-100%	0-255
	55	55		55	59		Red LED 5	Red 0-100%	0-255
	56	56		56	60		Green LED 5	Green 0-100%	0-255
	57	57		57	61		Blue LED 5	Blue 0-100%	0-255
	58	58		58	62		White LED 5	White 0-100%	0-255
					63		LED5 Dimmer	LED5 Dimmer 0-100%	0-255

Mode1	Mode2	Mode3	Mode4	Mode5	Mode6	Mode7	Fade Type	Function	Dmx Value
								Reserve	0-7
								Vertical divergence 1	8
								Vertical divergence 2	9
								Vertical random elongation	10
								Vertical random	11
								Vertical sequence flow	12
								Vertical single diffusion	13
								Vertical two pulsation 1	14
								Vertical two pulsation 2	15
								Vertical two pulsation 3	16
								Transverse sequence flow	17
								Transverse random elongation	18
			59		59	64	Pixels Shape Selection	Lateral divergence	19
								Single snaking beating	20
								Single point following runoff 1	21
								Single point random beating	22
								Single point following runoff 2	23
								Single point following runoff 3	24
								Single point following runoff 4	25
								Single point following runoff 5	26
								Square jitter	27
								Strip spinning	28
								Small strip beating 1	29
								Small strip beating 2	30
								Single point following runoff 5	31
								Reserve	32-255
								Radius size,Static	0-63
			60		60	65	Pixels Shape Speed	max to min speed	64-158
								Stop	159-160
								min to max speed	161-255
			61		61	66	Pixels Shape Fade	Shape Fade 0-100%	0-255
			62		62	67	Pixels Shape R	Shape R 0-100%	0-255
			63		63	68	Pixels Shape G	Shape G 0-100%	0-255
			64		64	69	Pixels Shape B	Shape B 0-100%	0-255
								CLOSED	0-3
								STROBE SLOW →FAST (1→25 flash/sec)	4-103
								OPEN	104-107
			65		65	70	Pixels Strobe	PULSATION SLOW →FAST (0.5-25 flash/sec)	108-207
								OPEN	208-212
								RANDOM STROBE SLOW → FAST	213-251
								OPEN	252-255
			66		66	71	Pixels Shape Dimmer	Shape Dimmer 0-100%	0-255
				39	67		Pixels 1 R	Pixels 1 R 0-100%	0-255
				40	68		Pixels 1 G	Pixels 1 G 0-100%	0-255
				41	69		Pixels 1 B	Pixels 1 B 0-100%	0-255
				42	70		Pixels 1 Dimmer	Pixels 1 Dimmer 0-100%	0-255
				43	71		Pixels 1 Shape Fade	Pixels 1 Shape Fade	0-255
				44	72		Pixels 1 Shape Speed	Pixels 1 Shape Speed	0-255
				45	73		Pixels 2 R	Pixels 2 R 0-100%	0-255
				46	74		Pixels 2 G	Pixels 2 G 0-100%	0-255
				47	75		Pixels 2 B	Pixels 2 B 0-100%	0-255
				48	76		Pixels 2 Dimmer	Pixels 2 Dimmer 0-100%	0-255
				49	77		Pixels 2 Shape Fade	Pixels 2 Shape Fade	0-255
				50	78		Pixels 2 Shape Speed	Pixels 2 Shape Speed	0-255
				51	79		Pixels 3 R	Pixels 3 R 0-100%	0-255
				52	80		Pixels 3 G	Pixels 3 G 0-100%	0-255
				53	81		Pixels 3 B	Pixels 3 B 0-100%	0-255
				54	82		Pixels 3 Dimmer	Pixels 3 Dimmer 0-100%	0-255
				55	83		Pixels 3 Shape Fade	Pixels 3 Shape Fade	0-255
				56	84		Pixels 3 Shape Speed	Pixels 3 Shape Speed	0-255
				.	.		.	.	.
				.	.		.	.	.
				.	.		.	.	.
				.	.		.	.	.
			153	181			Pixels 20 R	Pixels 20 R 0-100%	0-255
			154	182			Pixels 20 G	Pixels 20 G 0-100%	0-255
			155	183			Pixels 20 B	Pixels 20 B 0-100%	0-255
			156	184			Pixels 20 Dimmer	Pixels 20 Dimmer 0-100%	0-255
			157	185			Pixels 20 Shape Fade	Pixels 20 Shape Fade	0-255
			158	186			Pixels 20 Shape Speed	Pixels 20 Shape Speed	0-255



## 9.Maintance and cleaning

### **DANGER:Disconnect from the mains before starting any maintenance work.**

It is absolutely essential that the fixture is kept clean and that dust,dirt and smoke fluid residues must not buildup on or within the fixture. Otherwise, the fixtures light-output will be significantly reduced. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to function reliably through out its life. A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circum stances should alcohol or solvents be used!

The front objective lens will require weekly cleaning as smoke-fluid tends to building up residues, reducing the light-output very quickly. The cooling-fans should be cleaned monthly.

The gobos may be cleaned with a soft brush, The interior of the fixture should be cleaned at least annually using a vacuum-cleaner or an air-jet.

There are no serviceable parts inside the device except for the lamp and the fuse.

Replacing the fuse: If the lamp burns out, the fine-wire fuse of the device might fuse, too. Only replace the fuse by a fuse of same type and rating. Before replacing the fuse, unplug mains lead.

Maintenance and maintenance of the operation, please contact the manufacturer or distributor.

## 10.Electric equipment specification

### 10.1 Electrical paramters

SOURCE:RGBW 5LED-60W+ RGB 1280LED-0.2W

POWER:800W

VOLTAGE:AC100-240V 50/60HZ

Color Temperature:6500K

### 10.2 Weight and dimensions

Dimensions : 621X252X381mm

NET WEIGHT:20Kg

Dimensions (Carton Package) : 735X470X390mm

WEIGHT (Carton Package) : 25.5Kg

Dimensions (Flight Case -2 lights):1260X680X558mm

NET WEIGHT/WEIGHT (Flight Case -2 lights) : 71Kg/159Kg


### 10.3 Channel Characteristics

1. 29、38、58、66、158、186、71 standard DMX channel model.
2. Scan: Pan、Tilt 540° arbitrary position, 360° polderotation, Fixture could auto reset.
3. Shutter: electronic shutter, random strobe.
4. Demmer: limear dimmer.
5. 5 RGBW lamp can be controlled separately. 40X8 RGB Pixels.
6. The network control mode and DMX control mode have independent control and combined control.

### 10.4 Menu Function

1. Touch screen, English menu.
2. DMX values and communication quality values can be displayed in each channel. .
3. Monitor could ON/OFF automatically.
4. Display the time using of lighting feature and lamp as well as the times of turning on for lamp.
5. After the DMX signal is disconnected, the display will be bright and dark.
6. With DMX software upgrade.

## 11. Electronic drawing

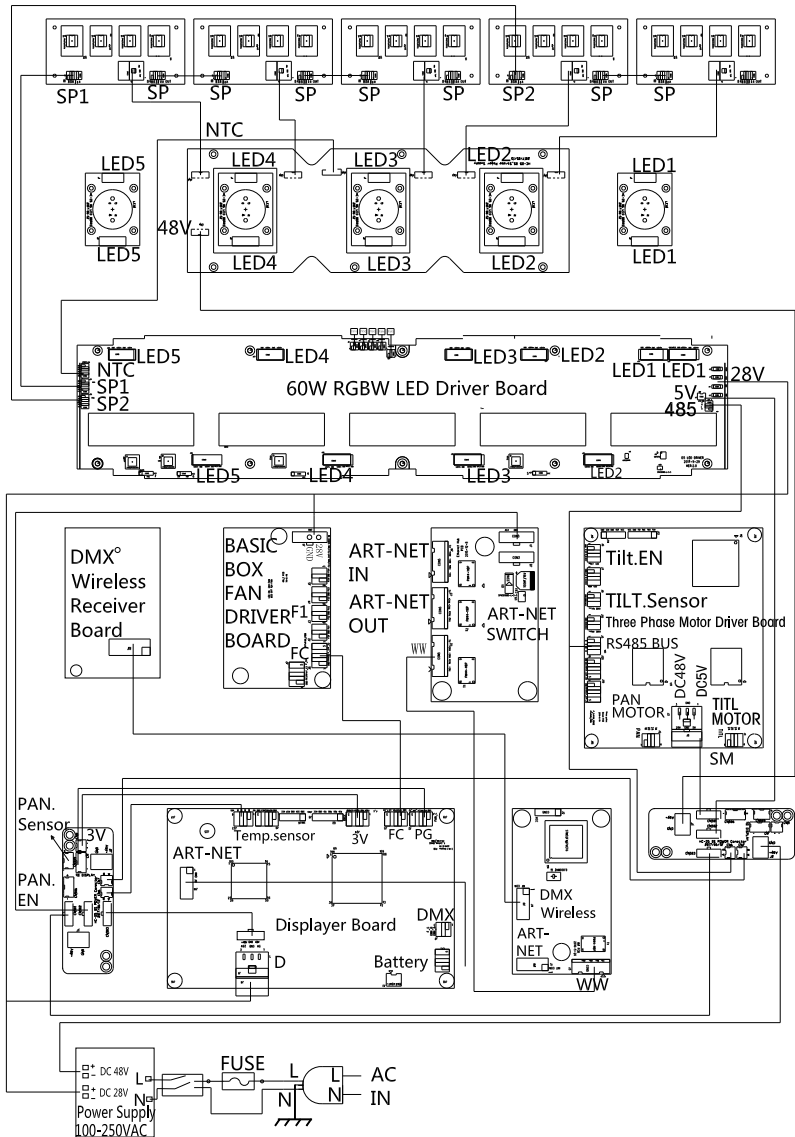

**Note: The above contents for reference only and is subject to change without prior notice, please take specification you have on hand and our company reserves the final right of interpretation.**



