


X-1000 Spot

USER MANUAL

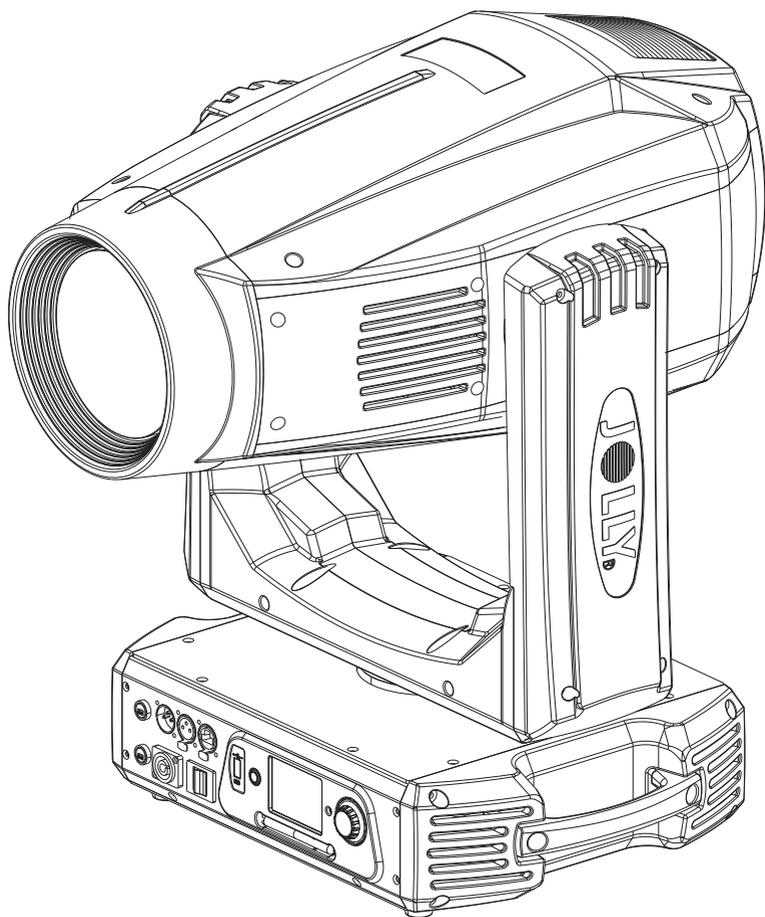

CE

JOLLY®

Table of content

1.Open–Package guidelines.....	1
1.1 Package.....	1
2.Safety instructions.....	1
3.Operating determination.....	3
4.Rigging the fixture.....	4
4.1 Mounting.....	4
4.2Installing the Clamps.....	4
4.3 Power supply connection and cut off.....	6
4.4 Power Connection.....	6
4.5 DMX–512 connection/connection between fixtures.....	6
5.Description of the device.....	7
6.Dimension.....	8
7.Display control.....	9
7.1 Navigation in the Menu.....	9
7.2 Display Operation.....	9
7.3 Menu Maps.....	11
8.DMX protocol.....	12
9.Maintance and cleaning.....	16
10.Electric equipment specification.....	16
10.1 Electrical paramters.....	16
10.2 Weight and dimensions.....	16
10.3 Channel Characteristics.....	16
10.4 Menu Function.....	17
10.5 light table.....	17
10.6 Color wheel.....	17
10.7 Gobo whee.....	18
11.Electronic drawing.....	20

Congratulations on choosing our products! Please carefully read this instruction manual in its entirety and keep it well for using reference. This manual contained about the installation and the relative using information of this products. Please refer to this manual's relative instruction when using this equipment.

1.Open–Package guidelines

This equipment is made of new style,high intensity plastic.It fully shows the modem times light charac teristic with teristic with beauty struture. And it is made accord to CE standard. Fully agree with the internation standard of DMX512 agreement.

When receive the product,please be careful to take and put,check if the product has damage or not because of transportation, and check the following parts:

- | | |
|--------------------|---------------------|
| 1.Signal cable-1PC | 2.Safty cable-1PC |
| 3.User Manval-1PC | 4.Omega holder-2PCS |
| 5.Power cable-1PC | 5.Service card-1PC |


1.1 Package

Unpacking the fixture


- 1.Open the flight case cover- Fig.1
- 2.With one person on each side, lift the fixture out of the flight case.
- 3.Unlock pan and tilt before operating fixture.

Packing the fixture


- 1.Disconnect the fixture from power and allow it to cool.
- 2.lock arms and head as figure.- Fig.2(PAN Mechanism Lock and Release (every 45°) - Fig.2-1)(Tilt Mechanism Lock and Release (every 45°) - Fig.2-2)
- 3.Place the fix ture in the bottom of the flight case, and cover the case without forcing.

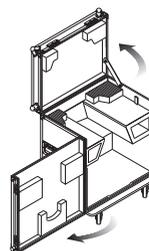


Aviation box Fig.1

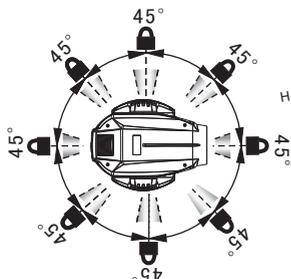

PAN Mechanism Lock Fig.2-1

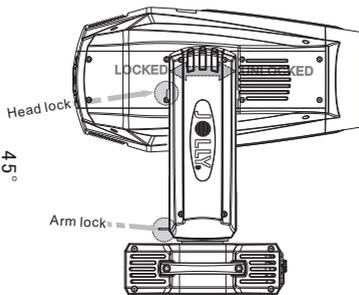

Level vertical transportation lock Fig.2

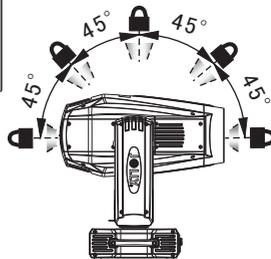

Tilt Mechanism Lock Fig.2-2

2.Safety instructions

Every person involvd with installation and maintenance of this device to:

- Be qualified
- Follow the instructions of this manual.

CAUTION!

*Be careful with your operations.
With a high voltage you can suffer
a dangerous electric shock when touching the wires!*

This device has been shipped with our premises in absolutely perfect condition.In order to maintain this condition and toensure a safe operation,it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Important:

- The manufacturer will not accept liability for any resulting damages caused by the nonobservance of this manual or any unauthorized modification to the device.
- Please consider that damages caused by manual modifications to the device are not subject to warranty.

- Never let the power-cord come into contact with other cables! Handle the power cord and all connections with particular caution!
- Make sure that the available voltage is not higher than stated on the rearpanel.
- Always plug in the power plug least. Make sure that the power-switch is set to off-position before you conctions with themains with particular caution!
- Make sure that the power-cord is never crimped or damaged by sharp edges. Check the decice and the p-ower-cord from time to time.
- Always disconnect from the mains, when the device is not in use or before cleaning it.
- Only handle the power-cord by the plug, Never pull out the plug by tugging the powercord.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- The electric connection, repairs and servicing must be carried out by a qualified employee.
- Do not connect this device to a dimmer pack.
- Do not switch the fixture on and off in short intervals as this would reduce the lamp's life.
- Do not touch the device's housing bare hands during its operation (housing becomes hot)!
- For replacement use lamps and fuses of same type and rating only.

Eye damage!

Avoid looking directly into the light source (meant especially for epileptics)!

- | | |
|------------|---|
| | <ul style="list-style-type: none"> ➤ Minimum distance of illuminated objects
The projector needs to be positioned so that the objects hit by the beam of light are at least 5 metres from the lens of the projector. |
| t_a 40°C | <ul style="list-style-type: none"> ➤ Maximum ambient temperature
Do not operate the fixture if the ambient temperatuer (T_a) exceeds 40°C (104°F). |
| t_s 80°C | <ul style="list-style-type: none"> ➤ Temperature of the external surface
The maximum temperature that can be reached on the external surface of the fitting, in a thermally steadystate, is 80°C (176°F). |
| IP20 | <ul style="list-style-type: none"> ➤ IP20 protection rating
The fitting is protected against penetration by solid of over 12mm (0.47") in diameter (first digit 2), but not against dripping water, rain, splashes or jets of water (second digit 0). |
| | <ul style="list-style-type: none"> ➤ Indoor use only |
| | <ul style="list-style-type: none"> ➤ Not suitable for household illumination |
| | <ul style="list-style-type: none"> ➤ Photobiological Safety
CAUTION. Do not look directly at the light source. Do not look at the light beam with optical devices or any other tool that could cause light convergence.
The fixture must be positioned so that the minimum distance between the front lens and human eye is at least 3metres to prevent personal photobiological risks. |
| | <ul style="list-style-type: none"> ➤ Mounting surfaces
It is permissible to mount the fitting on normally flammable surfaces. |
| CE | <ul style="list-style-type: none"> ➤ The products to which this manual refers comply with the European Directives pursuant to: <ul style="list-style-type: none"> •2006/95/EC - Safety of electrical equipment supplied at low voltage (LVD) •2004/108/EC - Electromagnetic Compatibility (EMC) •2011/65/EU - Restriction of the use of certain hazardous substances (RoHS) •2009/125/EC - EcoDesign requirements for Energy-related Products (ErP) |
| | <ul style="list-style-type: none"> ➤ Protection against electrical shock
Connection must be made to a power supply system fitted with efficient earthing (Class I appliance according to standard EN 60598-1). It is, moreover, recommended to protect the supply |

lines of the projectors from indirect contact and/or shorting to earth by using appropriately sized residual current devices.



➤ **Disposing**

This product is supplied in compliance with European Directive 2012/19/EU Waste Electrical and Electronic Equipment (WEEE). To preserve the environment please dispose/recycle this product at the end of its life according to the local regulation.



➤ **Battery**

This product contains a rechargeable lead-acid or lithium iron tetrphosphate battery. To preserve the environment, please dispose the battery at the end of its life according to the regulation in force.



➤ **Lamp**

The fitting mounts a high-pressure lamp that needs an external igniter. This igniter is fitted onto the apparatus. -Carefully read the "operating instructions" provided by the lamp manufacturer. -Immediately replace the lamp if damaged or deformed by heat.



➤ **Maintenance**

Before starting any maintenance work or cleaning the projector, cut off power from the mains supply. After switching off, do not remove any parts of the fitting for at least 10 minutes. After this time the likelihood of the lamp exploding is virtually small. If it is necessary to replace the lamp, wait for another 15 minutes to avoid getting burnt. The fitting is designed to hold in any splinters produced by a lamp exploding.



3. Operating determinations

- This device is a moving-head for creating decorative effects and was designed for indoor use only.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- Never run the device without lamp!
- Do not shake the device, avoid brute force when installing or operating the device.
- Never lift the fixture by holding it at the projector head, as the mechanics may be damaged. Always hold the fixture at the transport handles.
- When choosing the installation-spot, please make sure that the device is not exposed to heat, moisture or dust. There should not be any cables lying around. You endanger your own and the safety of others!
- The minimum distance between light output and the illuminated surface must be more than 0.2 meters.
- Make sure that the area below the installation place is blocked when rigging, derigging or servicing the fixture.
- Always fix the fixture with an appropriate safety rope. Fix the safety rope at the correct holes only.
- Operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- The lamp must never be ignited if the objective-lens or any housing-cover is open, as discharge lamps may explode and emit a high ultraviolet radiation, which may cause burns.
- The maximum ambient temperature 40° C must never be exceeded.
- Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation!
- Please use the original packaging if the device is to be transported.
- Please consider that unauthorized modifications on the device are forbidden due to safety reasons!
- If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock, burns due to ultraviolet radiation, lamp explosion, crash etc.

4. Rigging the fixture

4.1 Mounting



Pay attention to the regulations of CE.

Installation by qualified staff to complete.

- ☞ For the various mounting positions of the FIXTURE (standing on the floor, sideways or hanging) different accessories kits are available.
- ☞ Through this a safe and firm installation is assured.
- ☞ You'll find special connectors on the bottom side of the system which are put to use here.

4.2 Installing the Clamps

Please consider the respective national norms during the installation! The installation must only be carried out by an authorized dealer!

The installation of the projector has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.

The installation must always be secured with a secondary safety attachment, e.g. an appropriate catch net. This secondary safety attachment must be constructed in a way that no part of the installation can fall if the main attachment fails.

When servicing the fixture staying in the area below the installation place, on bridges, under high working places and other endangered areas is forbidden.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert after every four years in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.

The projector should be installed outside areas where persons may walk by or be seated.

Important! Overhead rigging requires extensive experience CE, including (but not limited to) calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installation yourself, but instead use a professional structural rigger. Improper installation can result in bodily injury and or damage to property.

The projector has to be installed out of the reach of people.


If the projector shall be lowered from the ceiling or high joists, professional trussing systems have to be used. The projector must never be fixed swinging freely in the room.

Caution Projectors may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do not install the projector!

Before rigging make sure that the installation area can hold a minimum point load of 10 times the projector's weight.


The projector can be placed directly on the stage floor or rigged in any orientation on a truss without altering its operation characteristics.

For overhead use, always install a safety-rope that can hold at least 10 times the weight of the fixture. You must only use safety-ropes with screw-on carabines. Pull the safety-rope through the two apertures on the bottom of the base and over the trussing system etc.

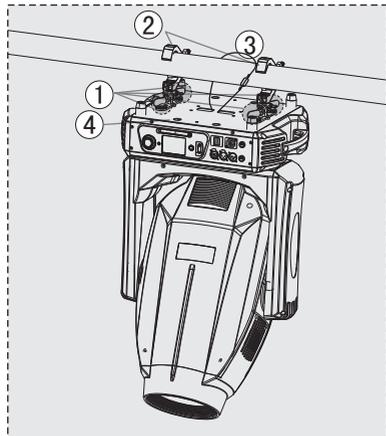

Warning: it is necessary to make sure that the installation location is perfectly appropriate, and the installation location is safe and reliable.

- | | |
|---|----------------|
| ① | Lock catch |
| ② | omega holder |
| ③ | secure chain |
| ④ | mounting plate |

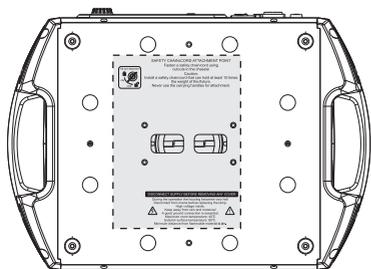

SAFETY CHAIN/CORD ATTACHMENT POINT

Fasten a safety chain/cord using cutouts in the chassis!

Caution:

Install a safety chain/cord that can hold at least 10 times the weight of the fixture.
Never use the carrying handles for attachment.



DISCONNECT SUPPLY BEFORE REMOVING ANY COVER

During the operation the housing becomes very hot
Disconnect from mains before replacing the lamp.

High voltage inside.

Keep away from rain and moisture!
A good ground connection is essential.
Maximum room temperature: 40°C
Exterior surface temperature: 80°C
Minimum distance from flammable material: 0.8m.

According to the four screws broke open the back cover, back cover marked as shown direction turn to change the bulb to corresponding card slot can be removed. According to the chart Three screws rotating back cover, can adjust the bulb location. As shown in figure;

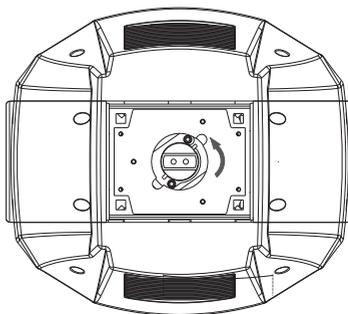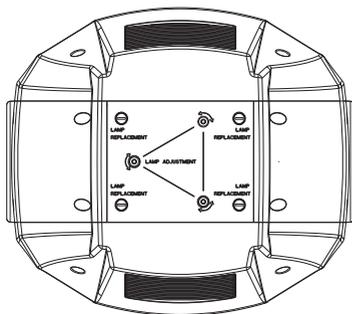


4.3 Power supply connection and cut off

Connect the light source to the main power source with the plug of the power cord, or cut off the power supply:

Connection: according to procedures, the power plug and socket is inserted into the groove one one alignment, rotation.

Cut off: according to procedures, press the button on the rotating plug, pull out.

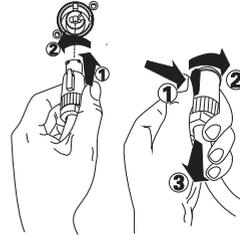

4.4 Power Connection

If you wish to change the power supply settings, see the chapter appendix Connect the fixture to the mains with the enclosed power cable and plug.




Warning: please verify the power of the power supply equipment prior to the connection! Earth wire must be grounded!

CABLE(EU)	CABLE(US)	Pin	INTERNATIONAL
Brown	Black	Live	L
Light blue	White	Neutral	N
Yellow/Green	Green	Earth	⊕

4.5 DMX-512 connection/connection between fixtures

Only use stereo shielded cable and 3-pin XLR-plugs and connectors in order to connect.

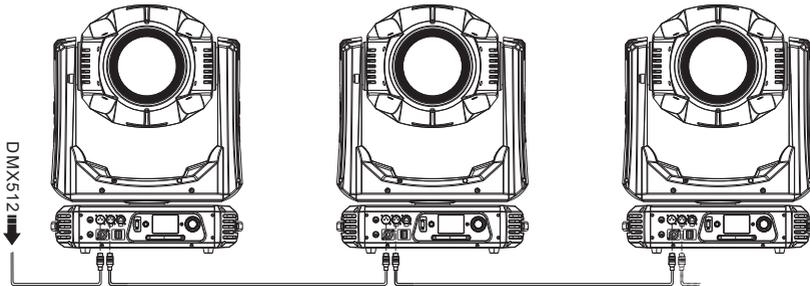

Caution

At the last fixture, the DMX-cable has to be terminated with a terminator. solder a 120 resistor between signal(-) and Signal (+) into a 3-pin XLR-plug and plug it in the DMX-output of the last fixture.

DMX output 3-pin XLR socket DMX input 3-pin XLR socket

DMX output 5-pin XLR socket DMX input 5-pin XLR socket




1: Ground
2: Signal (-)
3: Signal (+)




1: Ground
2: Signal (-)
3: Signal (+)
4: N. A.
5: N. A.

DMX Terminator Diagram

-For installations where the DMX cable has to run a long distance or is in an electrically noisy environment it is recommended to use a DMX terminator. This helps in preventing corruption of the signal by electrical noise. The DMX terminator is simply an XLR plug with a 120Ω resistor connected between pins 2 and pins 3, which is then plugged into the output XLR socket of the last fixture in the chain.

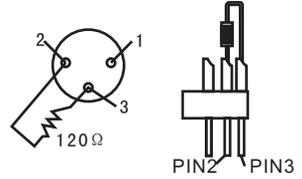


5. Description of the device


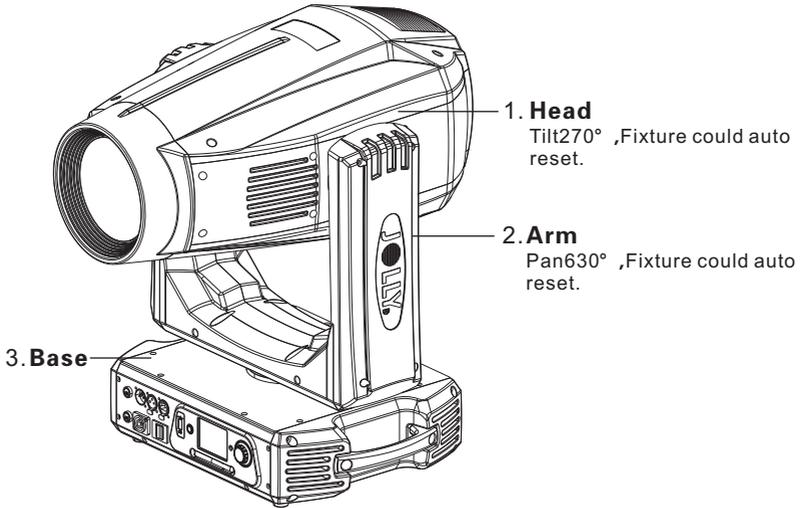


Display panel

- 4. 5-pin XLR female
- 5. Network interface
- 6. Power switch
- 7. Power-in
- 8. Main Fuse
- 9. 5-pin XLR male
- 10. Display
- 11. Small button
- 12. WDMX wire
- 13. Knob
- 14. USB interface
- 15. Status indicator lamp

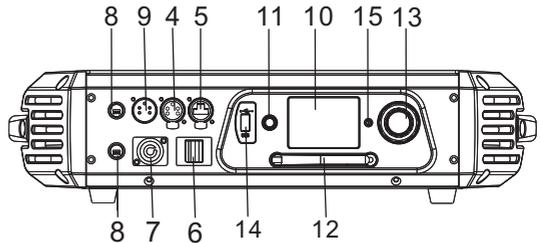

6.Dimension

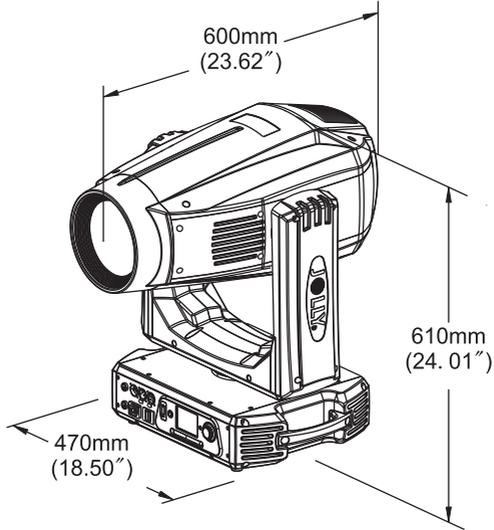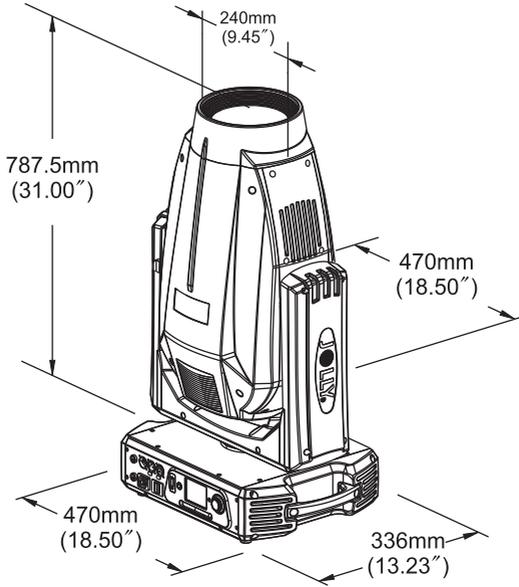

7.Display control

7.1 Navigation in the Menu

Using the buttons or touch screen, and this can be simply and easily set the address code and functions code.

If you view or modify the lighting feature set, then press ENTER button, the display will enter the menu interface. Both there is sub menu corresponding to the functional operation of the main menu. Each of the menus is representative of the specific features of the lamp. The specific contents shows as the table menu below.

Set or browse lighting function, press UP or DOWN button.

Press ENTER to save your changes or enter the submenu.Press the UP or DOWN can change the numerical (increase or decrease in value).


Press the MODE button to return to menu. Set a time 0 to 10 minutes automatically exit menu interface and close the screen.

7.2 Display Operation

Put through power supply, open the power switch of lamps and lanterns,display show the company LOGO website. According to the main interface, as shown in figure:

In the main interface, press "MODE" button to view the software version, press the "UP" "DOWN" can modify the DMX address.

If the screen "⊗" icon is green,said DMX signal connection is normal, this state can be used to check th-lamps and lanterns and connection between the control table is normal.

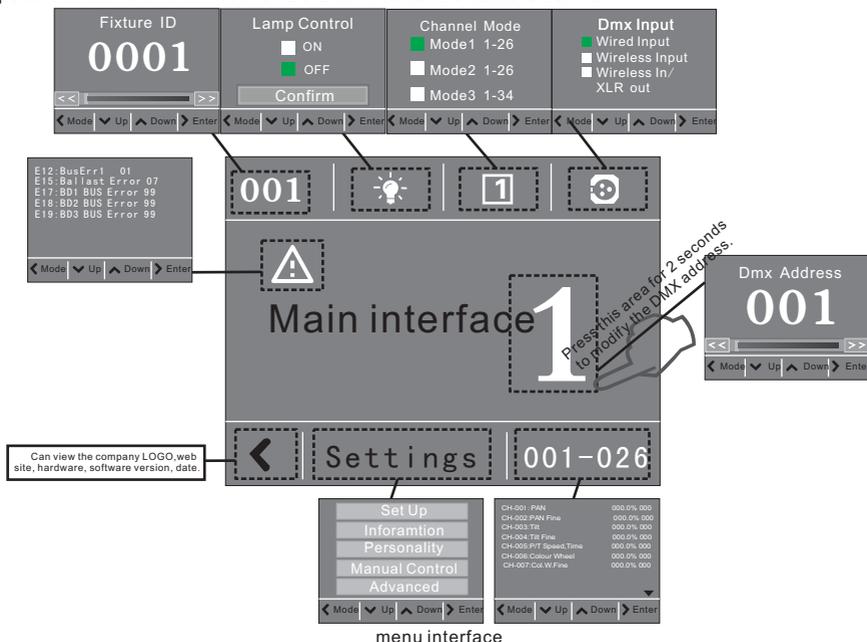

This lamp can be set to turn off the automatic flip screen function, touch this "⊗" icon can be manually flip screen.

Click on the main interface of the icon, numerical to view view Settings related information of lamps and lanterns. Symbols such as the main interface appear "△", the following error message indicates that there might be a lamps and lanterns, can click to view and control information content to modify the lamps and lanterns.

CODE	ERROR MESSAGE	MEANS
E001	SpiFlashError	Look for virtual communication signal lines or the main chip welding or short circuit
E002	Program Err 1	
E003	Program Err 2	Change the main control chip or replace the display board
E004	MBDInit Error	
E005	BD1Init Error	Look for virtual communication signal lines, communication chip welding or short circuit
E006	BD2Init Error	Check whether the communication line is connected well or dial the code is wrong
E007	BD3Init Error	
E008	BD4Init Error	
E012	BusErr1	
E013	BusErr2	
E014	SPDError	
E016	MFpga Error	
E017	BD1 BUS Error	
E018	BD2 BUS Error	
E019	BD3 BUS Error	
E020	BD4 BUS Error	
E021	Pan FB. Err	Check the horizontal and vertical feedback line connection good or feedback IC do you have any empty welding, short circuit
E022	Pan Zero Err	Check the horizontal and vertical origin line connection good or magnetic susceptibility do you have any empty welding, short circuit
E023	Tilt FB. Err	Check the horizontal and vertical feedback line connection good or feedback IC do you have any empty welding, short circuit
E024	Tilt Zero Err	Check the horizontal and vertical origin line connection good or magnetic susceptibility do you have any empty welding, short circuit
E025	Prism Err1	Check line magnetic susceptibility, magnets and magnetic susceptibility of distance and location, have the magnet.
E026	Prism Err2	
E027	R.Gobo1 Err1	
E028	R.Gobo1 Err2	
E029	R.Gobo2 Err1	
E030	R.Gobo2 Err2	
E031	Zoom Err	
E032	Focus Err	
E033	St.Gobo Err	
E034	ColourW. Err	
E035	Iris Error	
E036	Cyan Err	
E037	Magenta Err	
E038	Yellow Err	
E039	Cto Err	
E040	Frost2 Err	Check the fan cables, signal lines, fan
E042	B.Fan1Error	
E044	B.Fan2Error	
E046	B.Fan3Error	
E048	H.Fan1Error	
E050	H.Fan2Error	
E052	A.Fan1Error	
E054	L.Fan1Error	
E058	L.Fan3Error	

7.3 Menu Maps

Setup	Dmx Address	001~xxx	Dmx Address
	Channel Mode	Mode1 1-26	Default Mode1
		Mode2 1-26	
Mode3 1-34			
Fixture Id	0001~xxxx	Lamps address	
Information	Fixture Times	xxxxxh xxm	Total working hours
	Lamp Times	Xxxxh xxm	Lamp On working hours
	Error List	Err xxxxxx	Error details
	Diagnosis	BOARD x: xx.xx%	
	Fans Monitor	HfanxSpd: x (r/m)	Fans Monitor
	Dmx Value	CHxx: xx xxx	DMX Values
	Personality	Lamp	Power On Light
Light By Dmx			Light By Dmx (default ON)
Lamp On Delay			Lamp ON Delay(xxm)
Pan/Tilt		Pan Reverse	Pan Reverse
		Tilt Reverse	Tilt Reverse
Dmx Input		Feedback	Feedback ON/OFF
		Wired Input	Wired Input (default)
		Wireless Input	Wireless Input
		Wireless In/XLR out	Wireless In/XLR out
BlackOut		P/T Moving	
		Colour Moving	
		Gobo Moving	
Screen		Brightness	
		Screen Time	
		Touch Close	
	Auto Screen	Auto Screen	
Manual Control	Lamp	ON/OFF	Lamp Control
	Reset	Reset All	
		Reset Pan/Tilt	
		Reset Colour	
		Reset Gobo	
		Reset Other	
Channel	CHxx: xx xxx	Chanel Testing	
Advanced	Calibration	Input Password	Chanel Adgusting
	Factory Default		Reset to original parameters
	Touch Calibration		Touch screen adjusting

8.DMX protocol

Mode1	Mode2	Mode3	Function	DMX Value
1	22	25	Pan,16-bit (MSB and LSB)	
2	23	26	Left → right (32768 = neutral)	0-65535
3	24	27	Tilt,16-bit (MSB and LSB)	
4	25	28	Up → down (32768 = neutral)	0-65536
5	7	8	Colour Wheel	
			Continuous Scroll	
			Open	0
			Open→Slot1	1-14
			Slot1	15
			Slot1→Slot2	16-29
			Slot2	30
			Slot2→Slot3	31-44
			Slot3	45
			Slot3→Slot4	46-59
			Slot4	60
			Slot4→Slot5	61-74
			Slot5	75
			Slot5→Slot6	76-89
			Slot6	90
			Slot6→Slot7	91-104
			Slot7	105
			Slot7→Slot8	106-119
			Slot8	120
			Slot8→Open	121-127
			Open	128-140
			Stepped Scroll(snap to full color positions)	
			Slot1	141-145
			Slot2	146-150
			Slot3	151-155
			Slot4	156-160
			Slot5	161-165
			Slot6	166-170
			Slot7	171-175
			Slot8	176-180
			Open	181-185
			Continuous Rotation	
CW, Fast→Slow CW	186-211			
Stop(This will stop the color wheel wherever it is at the time)	212-217			
CCW,Slow→Fast CCW	218-243			
Random color				
Fast	244-247			
Medium	248-251			
Slow	252-255			
6	3	4	Cyan	
			White →full cyan	0-255
7	4	5	Magenta	
			White →full magenta	0-255
8	5	6	Yellow	
			White →full yellow	0-255
9	6	7	CTO	
			Open(6000 K)→warm (3200 K)	0-255
10	8	9	Breakup wheel (wheel 1)	
			Open	0-9
			Gobo 1	10-14
			Gobo 2	15-19
			Gobo 3	20-24
			Gobo 4	25-29
			Gobo 5	30-34
			Continuous gobo rotation:set gobo rotation speed on channels 11/12(Mode 1),9/10 (Mode 2) or 10/11 (Mode 3)	
			Gobo 1	35-39

Mode1	Mode2	Mode3	Function	DMX Value
10	8	9	Gobo 2	40-44
			Gobo 3	45-49
			Gobo 4	50-54
			Gobo 5	55-59
			Gobo shake	
			Gobo 1, 360° slow → 10° fast	60-89
			Gobo 2, 360° slow → 10° fast	90-119
			Gobo 3, 360° slow → 10° fast	120-149
			Gobo 4, 360° slow → 10° fast	150-179
			Gobo 5, 360° slow → 10° fast	180-209
			Continuous gobo wheel scroll with continuous gobo rotation:set gobo rotation speed on channels 11/12(Mode1) or 9/10 (Mode2),10/11(Mode3)	
			CW gobo wheel scroll, fast → slow CW	210-232
			CCW gobo wheel scroll, slow → fast CCW	233-255
			11	9
No gobo rotation, gobo indexed at 0° CW, fast → slow No gobo rotation, gobo stops at current position CCW, slow → fast No gobo rotation, gobo indexed at 90°	0-600 601-32130 32131-32895 32136-64515 64516-65535			
13	11	12	Aerial wheel (wheel 2) Open	0-9
			Gobo 1	10-14
			Gobo 2	15-19
			Gobo 3	20-24
			Gobo 4	25-29
			Gobo 5	30-34
			Gobo shake	
			Gobo 1, 360° slow → 10° fast	60-89
			Gobo 2, 360° slow → 10° fast	90-119
			Gobo 3, 360° slow → 10° fast	120-149
			Gobo 4, 360° slow → 10° fast	150-179
			Gobo 5, 360° slow → 10° fast	180-209
			Continuous gobo wheel scroll with continuous gobo rotation: set gobo rotation speed on channels 11/12(Mode1) or 9/10(Mode2),10/11(Mode3)	
			Gobo 1	35-39
			Gobo 2	40-44
			Gobo 3	45-49
			Gobo 4	50-54
			Gobo 5	55-59
			CW gobo wheel scroll, fast → slow	210-232
CCW gobo wheel scroll, slow → fast	233-255			
14	12	13	Aerial wheel(wheel 2): gobo indexing, rotation (16-bit fine, MSB and LSB) If indexed gobo is selected on channel 10(Mode1) or 8 (Mode2),9(Mode3) Gobo indexing, 0° → 360° If continuous gobo rotation is selected on channel 10 (Mode1) or 8 (Mode2) , 9(Mode3)	0-65536
			No gobo rotation, gobo indexed at 0° CW, fast → slow No gobo rotation, gobo stops at current position CCW, slow → fast No gobo rotation, gobo indexed at 90°	0-600 601-32130 32131-32895 32136-64515 64516-65535
15	13	14	FX wheel (wheel 3) static gobos and animation effect selection.rotation, animation movement type	
			Continuous FX wheel scrolling	
16	14	15		

Mode1	Mode2	Mode3	Function	DMX Value			
16	14	15	Open	0			
			Open → Gobo 1	1-9			
			Gobo 1	10			
			Gobo 1 → Gobo 2	11-19			
			Gobo 2	20			
			Gobo 2 → Gobo 3	21-29			
			Gobo 3	30			
			Gobo 3 → Gobo 4	31-39			
			Gobo 4	40			
			Gobo 4 → Position 5	41-49			
			Position 5	50			
			Position 5 → Position 6	51-59			
			Position 6	60			
			Position 6 → Position 7	61-69			
			Position 7	70			
			Position 7 → Position 8	71-79			
			Position 8	80			
			Position 8 → Position 9	81-89			
			Position 9	90			
			Position 9 → Open	91-99			
			Open	100-110			
			Stepped FX wheel scrolling				
			Gobo 1	111-115			
			Gobo 2	116-120			
			Gobo 3	121-125			
			Gobo 4	126-130			
			Position 5	131-135			
			Position 6	136-140			
			Position 7	141-145			
			Position 8	146-150			
			Position 9	151-155			
			Open	156-160			
			Continuous FX wheel rotation: set rotation speed on channel 17 (Mode1) or 15(Mode2),16(Mode3)				
			CW FX wheel rotation, fast → slow	161-189			
			FX wheel stops at its current position	190			
			CCW FX wheel rotation, slow → fast	191-219			
			No function	220-226			
			Animation movement functions: set speed on channel 17 (Mode1) or 15(Mode2), 16(Mode3)				
			Smooth	227-229			
			Organic	230-232			
Metronome	233-235						
Run forwards, fast rewind	236-238						
Run backwards, fast rewind	239-241						
Random gobo function;set time on channel 17(Mode1)or15(Mode2),16(Mode3)							
Random animation range position	242-249						
Random gobo position	250-252						
Random FX wheel position	253-255						
17	15	16	FX wheel animation speed				
			Stop	0-10			
			Animation speed slow → fast	11-255			
18	17	18	Prism				
			Prism off	0-10			
			Prism indexing: set angle on ch. 17(Mode2) or 18 (Mode1 or Mode3)	11-138			
19	18	19	Prism rotation: set direction and speed on channel. 18(Mode2) or 18 (Mode1 or Mode3)	139-255			
			Prism indexing angle, rotation speed and direction				
			If prism indexing is selected on channel17(MODE2)or18(MODE1&MODE3)				
			Indexed angle 0° - maximum	0-255			
			If prism rotation is selected on channel17(MODE2)or18(MODE1&MODE3)				
			Prism stop,indexed at 0°	0-2			
CW rotation, fast →slow	3-126						
Prism stop at its current position	127-129						

Mode1	Mode2	Mode3	Function	DMX Value
19	18	19	CCW rotation, slow→fast	130-253
			Prism stop, indexed at 45°	254-255
20	16	17	Frost	
			No frost → full fros	0-255
21	19	20	Iris	
			Close	252-255
			Fast open,fast close -fast open,fast close	172-211
			Slow open,slow close- fast open,fast close	212-251
			Slow pulsation fast pulsation	132-171
			Open →closed	0-131
22	20	21	Zoom,16-bit(MSB and LSB)	
		22	Flood→spot	0-65535
23	21	23	Focus, 16-bit (MSB and LSB)	
		24	Infinity →near	0-65535
24	1	1	Strobe/shutter	
			Shutter closed (Lamp switches to 800 watt mode after shutter is closed for 3 seconds)	0-19
			Shutter open	20-49
			Strobe, slow →fast	50-200
			Shutter open	201-210
25	2	2	Random strobe, slow → fast	211-255
		3	Dimmer fade(MSB) Closed → open	0-255
26	26	29	Dimmer fade,fine(LSB)	0-255
			No function	0-9
			Reset entire fixture -3 sec.	10-14
			Reset dimmer and shutter only -3 sec.	15-19
			Reset CMY, CTO and color wheel only -3 sec.	20-24
			Reset effects(breakup, aerial and FX wheels, iris, prism, frost, zoom, focus) only -3 sec.	25-29
			Reset pan and tilt only -3 sec.	30-34
			No function	35-39
			Lamp on -3 sec.	40-44
			Lamp off -3 sec.	45-49
			No function	50-104
			Disable zoom/focuslinking -1 sec.	105-109
			Enable zoom/focus linking,near distance(5 meters) -1 sec.	110-114
			Enable zoom/focus linking,mediumdistance(8 meters) (default setting)-1 sec.	115-119
			Enable zoom/focus linking, far distance(12 meters) -1 sec.	120-124
			Ballast output full, set to 100% (default setting)	125-126
			Ballast output reduced to 90%	127-128
			Ballast output reduced to 80%	129-130
			Ballast output reduced to 70%	131-132
			Ballast output reduced to 60%	133-134
			Beam smoothing=ON -1sec.	135-139
			Beam smoothing=OFF -1sec. (default setting)	140-144
			Pan/Tilt Moving blackout=ON -1sec.	145-149
			Pan/Tilt Moving blackout=OFF-1sec.(default setting)	150-154
			Colour Moving blackout=ON -1sec.	155-159
			Colour Moving blackout=OFF -1sec.(default setting)	160-164
			Gobo Moving blackout=ON -1sec.	165-169
			Gobo Moving blackout=OFF -1sec.(default setting)	170-174
			No function	175-224
			autofocus priority rotation gobo1	225-229
			autofocus priority rotation gobo	230-234
			autofocus priority FX wheel	235-239
			autofocus priority Iris	240-244
			No function	245-255
		30	Reserved	0-255
		31	Reserved	0-255
		32	Reserved	0-255
		33	Reserved	0-255
		34	Reserved	0-255

9. Maintenance and cleaning

DANGER: Disconnect from the mains before starting any maintenance work.

It is absolutely essential that the fixture is kept clean and that dust, dirt and smoke fluid residues must not build up on or within the fixture. Otherwise, the fixtures light-output will be significantly reduced. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to function reliably through out its life. A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should alcohol or solvents be used!

The front objective lens will require weekly cleaning as smoke-fluid tends to building up residues, reducing the light-output very quickly. The cooling-fans should be cleaned monthly.

The gobos may be cleaned with a soft brush, The interior of the fixture should be cleaned at least annually using a vacuum-cleaner or an air-jet.

There are no serviceable parts inside the device except for the lamp and the fuse.

Replacing the fuse: If the lamp burns out, the fine-wire fuse of the device might fuse, too. Only replace the fuse by a fuse of same type and rating. Before replacing the fuse, unplug mains lead.

Maintenance and maintenance of the operation, please contact the manufacturer or distributor.

10. Electric equipment specification

10.1 Electrical parameters

SOURCE: OSRAM 1000W/PS Lok-it! / PHILIPS MSR GOLD 1000 MiniFastfit

POWER: 1203W

VOLTAGE: AC 120-240V 50/60HZ

Color temperature: 6000K

10.2 Weight and dimensions

Dimensions : 600X470X610mm

NET WEIGHT: 42Kg

Dimensions (Carton package) : 746X596X751mm

WEIGHT (Carton package) : 51.5Kg

Dimensions (Air boxes -1 lights): 690X530X855mm

NET WEIGHT/WEIGHT (Air boxes -1 lights) : 38.75Kg/82.75Kg

10.3 Channel Characteristics


1. Channel: 26, 26, 34DMX-512.
2. Scan: Pan630°, Tilt270°, Fixture could auto reset.
3. Colour wheel: One open+8 colors.
4. RGo bo wheel 2 : one open+5 gobos.
5. GoboR wheel: one open + 4 gobos+FX
6. Frost: linear frost
7. Focus: linear focus.
8. Shutter: electronic shutter, random strobe.
9. Dimmer: linear dimmer.
10. Prism system: prism effect, with rotating.
11. Zoom: linear amplifier.

10.4 Menu Function

- 1.Touch screen, English menu.
- 2.Each DMX Value displayable.
- 3.Monitor could ON/OFF automatically.
- 4.Show fixture, lamp use time.
- 5.Lamp on/off when power on.
- 6.Screen rotation.
- 7.Auto error detection.
- 8.Wireless input,wired input,wireless in/xlr out.


10.5 light table

60° Illuminance(Lux)	1730	432	192	108	69
8° Illuminance(Lux)	75800	18690	8344	4689	3000

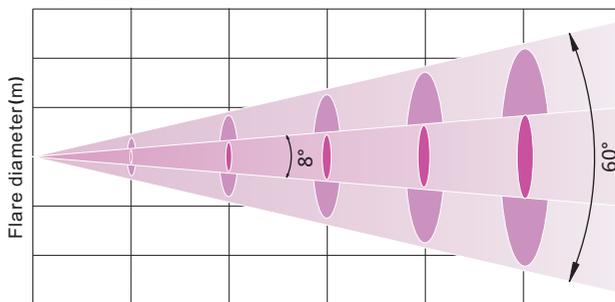


Projection distance(m)	5	10	15	20	25
The design at the minimum Angle					
8° Flare diameter(m)	Φ 0.72	Φ1.46	Φ2.18	Φ2.91	Φ3.64
Minimum Angle when the beam of light 60°					
Flare diameter (m)	Φ 5.72	Φ11.46	Φ17.18	Φ22.9	Φ28.63


10.6 Color wheel

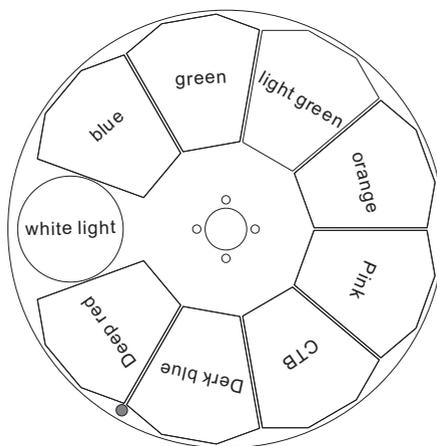


10.7 Gobo wheel
RGOBO WHEEL —

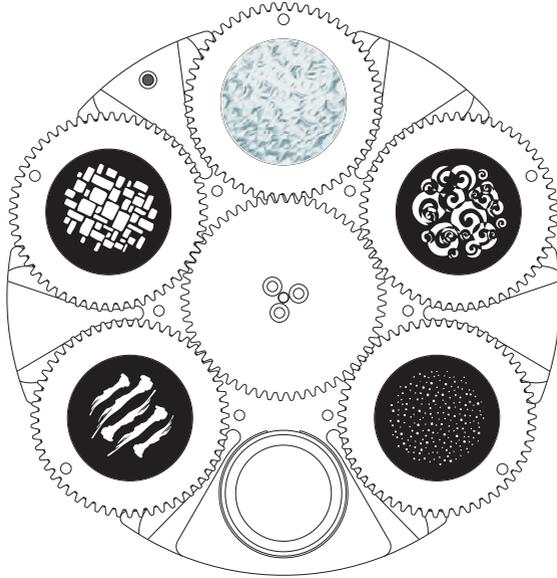


RGOBO WHEEL 二

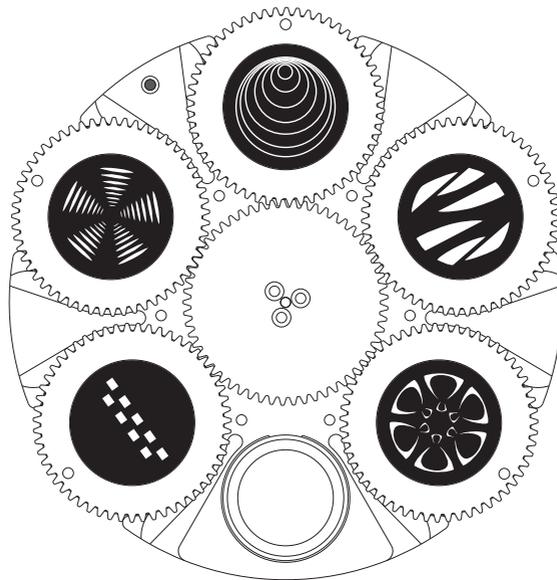

GOBOR WHEEL

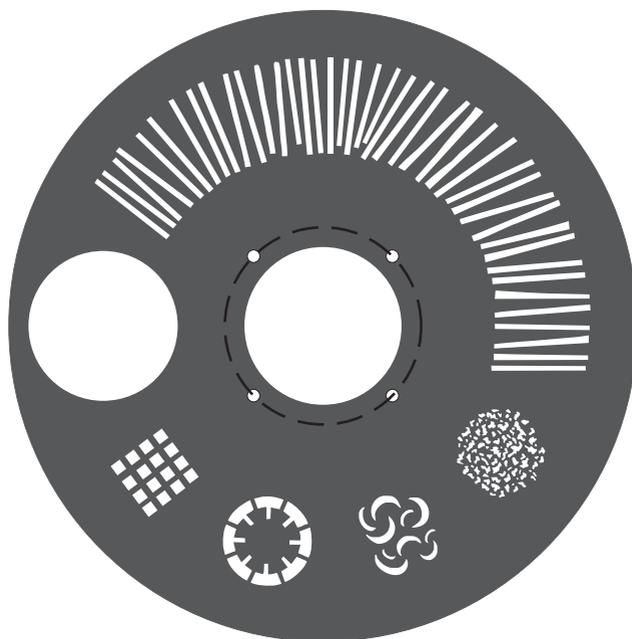

11. Electronic drawing

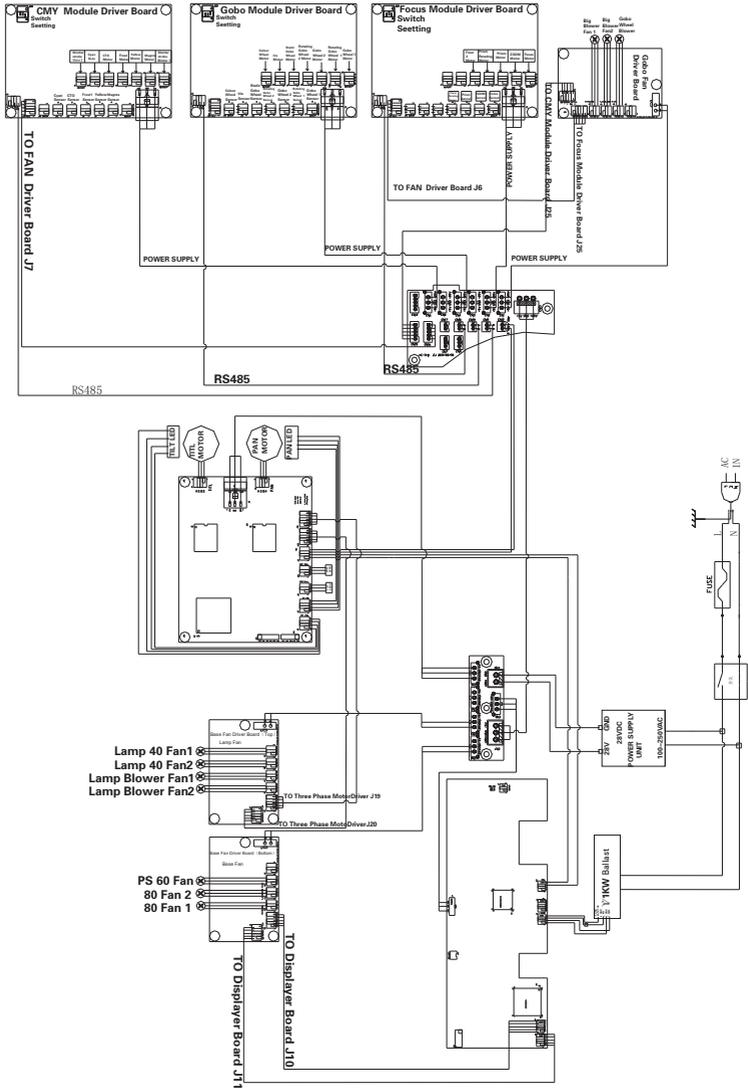

Note: The above contents for reference only and is subject to change without prior notice, please take specification you have on hand and our company reserves the final right of interpretation.



<http://www.jollylighting.com>

Guangzhou hongcai stage equipment Co.,Ltd

Tel:+862084558833 Fax:+862084559699

Email:info@jollylighting.com P.C:511450

Add:Building2,No.32,Changsha Street, Shachong Village,shiji Tow.Panyu District,Guangzhou,China